




# Samsung Galaxy Gear Battery Replacement

Replace the battery through this guide.

Written By: Edward Yi

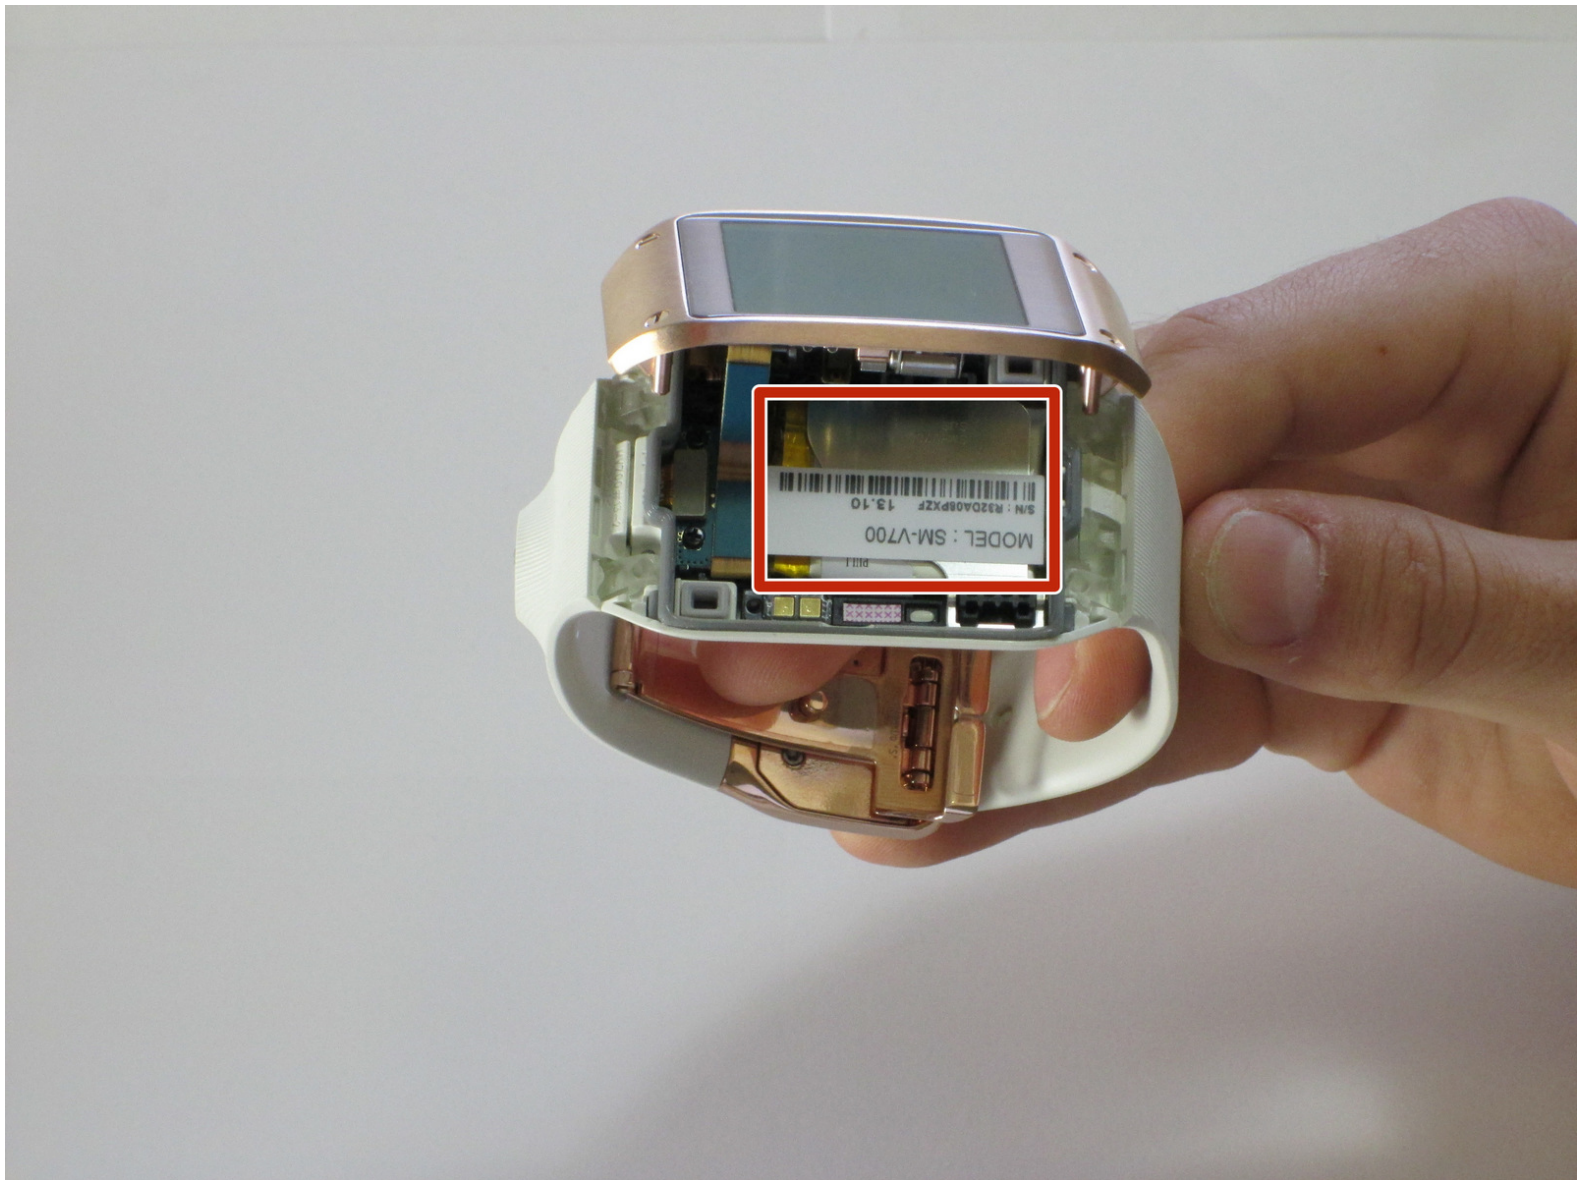

## INTRODUCTION

Note: This guide is a continuation off of the display housing removal guide. It is crucial that you follow and complete the prerequisite guide step-by-step.


Use this guide to easily replace a faulty battery or insert a fresh new battery for a longer- lasting, more reliable Samsung Galaxy watch.



### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Display Housing

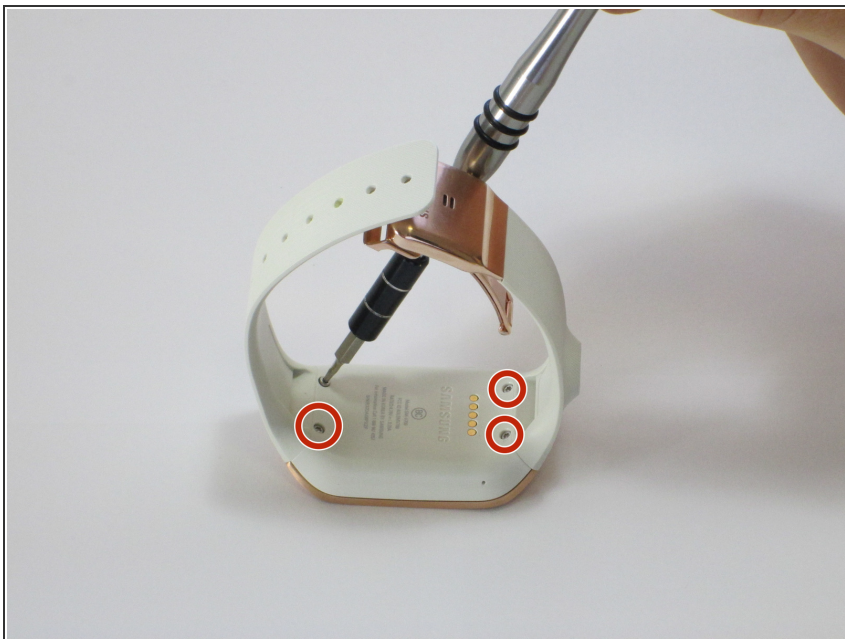

- Use a T5 Torx screwdriver to remove the four 4.0 mm screws on the back of the device.

✦ Be sure your device is turned off.



## Step 2

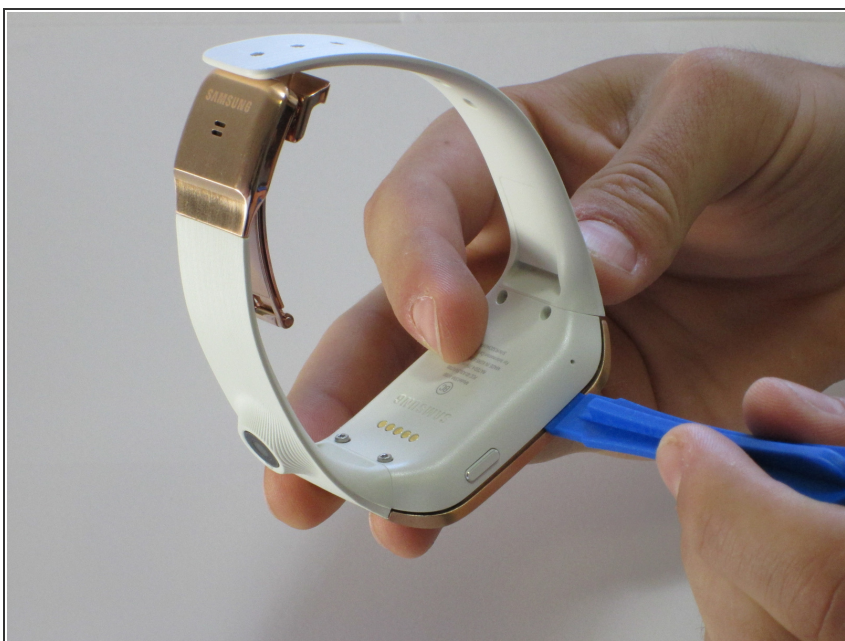

- Use a plastic opening tool to separate the display housing from the device.
- ⓘ To ensure you don't damage your device, insert the opening tool and slide it the entire length of the gap on both sides of the device.





### Step 3

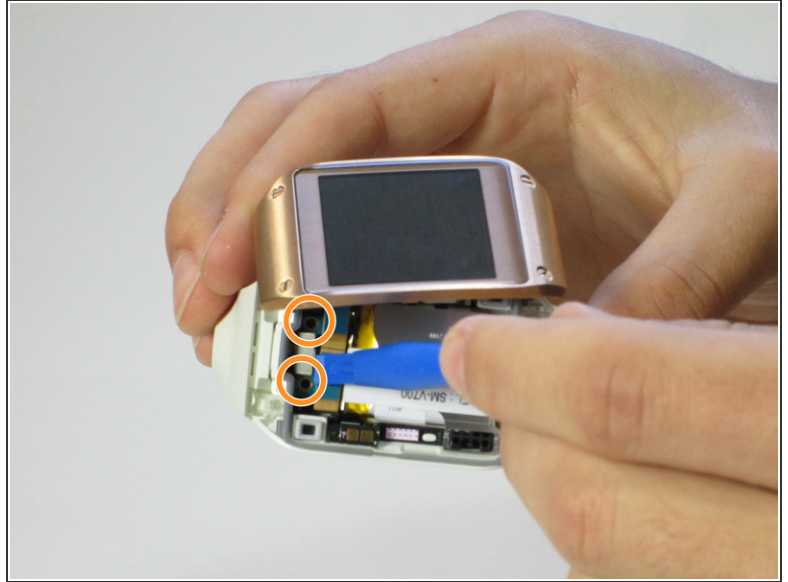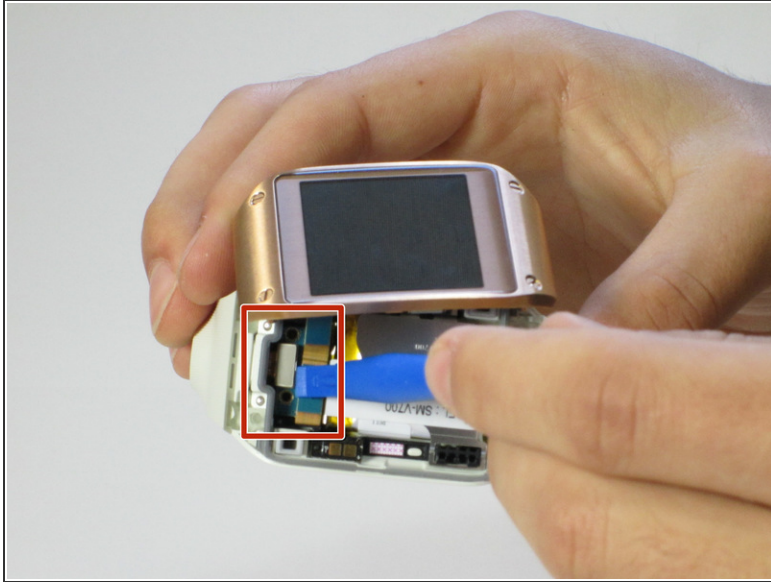



- Gently pry back the metal flap on top of the connector.
- Locate the two 2.0 mm black screws and unscrew using a Phillips PH00 bit. The connector will detach from the device.

## Step 4 — Battery

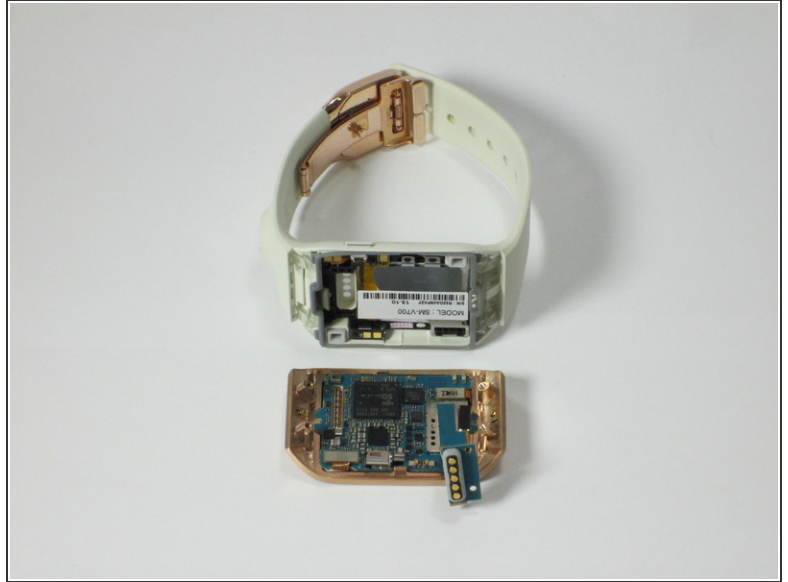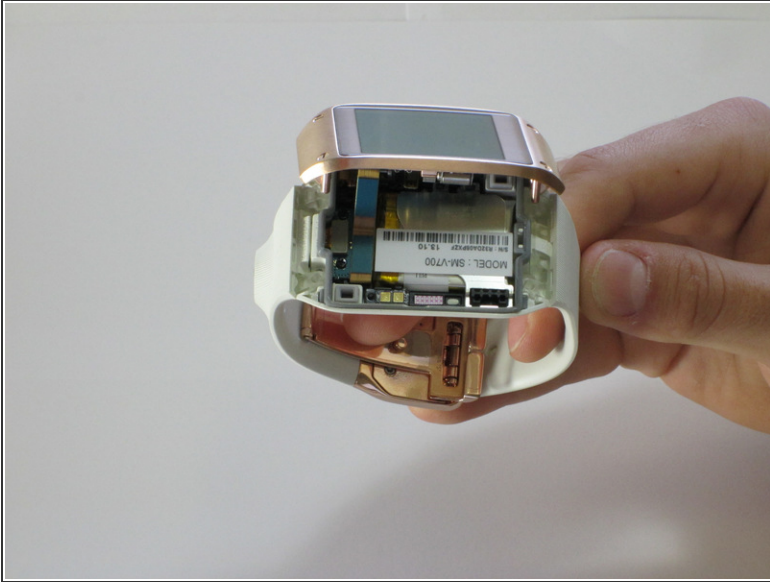


- After separating the LCD/motherboard from the actual watch itself, the watch should be in two separate pieces.
- ⓘ You will only need the watch/strap component so you can set aside the LCD/motherboard component.


## Step 5

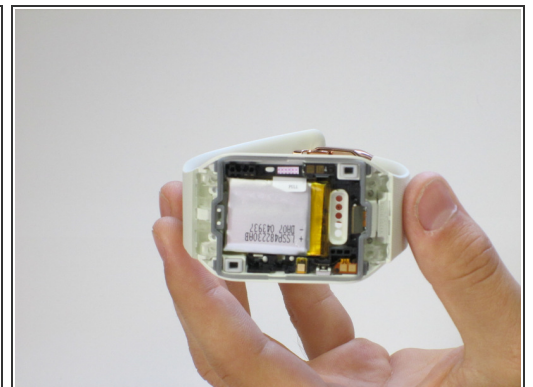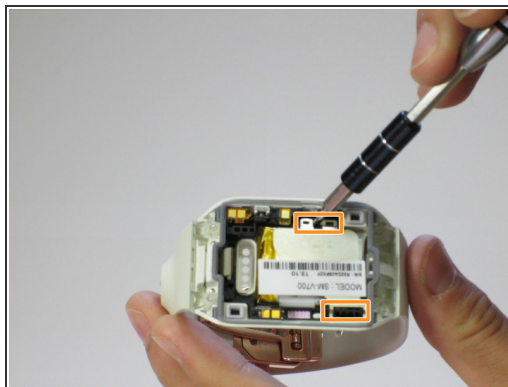

- Look for the metal bracket that covers and secures the battery in place.
- Loosen the bracket by prying underneath the metal plating with the plastic opening tool. Remove the bracket and set it to the side.
- The battery should now be exposed.

## Step 6

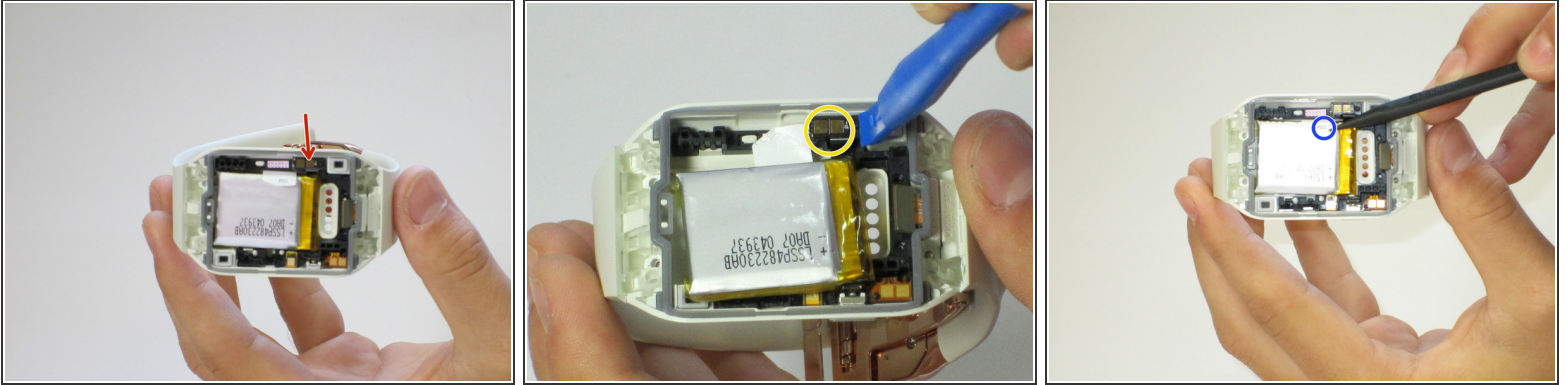

 Notice the leads attached to the base of the watch. You will need to remove this before you pull the battery out.

- Using the plastic opening tool, pry underneath the leads and disconnect it from the back of the watch.
- Slowly tug on the "PULL" tag and remove the battery from the watch.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:00:29 AM.